

802.11 b/g Wireless IP Camera With pan/tilt function

User Manual



Revision: 020205

Date: 2009/04/21

For firmware version v020205

Table of Contents

1. INTRODUCTION.....	6
2. HARDWARE DESCRIPTION AND QUICK INSTALLATION/USAGE	8
2.1. MAJOR HARDWARE COMPONENTS.	8
2.2. QUICK INSTALLATION AND USAGE	9
2.3. WIRELESS CONNECTION	13
3. WEB CONFIGURATIONS.....	15
3.1. INFORMATION	16
3.2. VIDEO DISPLAY	17
3.3. NETWORK.....	19
3.4. WIFI SECURITY	21
3.5. ADVANCED NETWORK.....	24
3.6. VIDEO SETTINGS	25
3.7. 3GPP/RTSP SETTINGS.....	27
3.8. EMAIL/FTP ALARM	28
3.9. DI/DO SETTINGS	30
3.10. NAS SETTINGS.....	31
3.11. SD-CARD SETTINGS	33
3.12. SCHEDULING	35
3.13. LED DISPLAY CONTROL	37
3.14. DATE/TIME.....	38
3.15. ADMIN.....	39
3.16. UPGRADE	40
3.17. REBOOT.....	42
3.18. SAFE MODE.....	43
3.19. SET TO FACTORY DEFAULT	44
4. FEATURES AND SPECIFICATIONS.....	45
4.1. FEATURES	45
4.2. SPECIFICATIONS.....	46
5. PACKAGE CONTENTS.....	49
APPENDIX A. LIST OF TESTED NAT/ROUTER DEVICES	50
APPENDIX B. MAXIMUM ALLOWED VIDEO USERS.....	51
APPENDIX C. PERFORMANCE INFORMATION	52

Pan/Tilt IP Camera

APPENDIX D. TROUBLE SHOOTING	53
APPENDIX E. 3GPP/ISMA OPERATION.....	56
APPENDIX F. THIRD PARTY AND EMBEDDED WEB PAGE INTEGRATION	57

List of Figures and Tables

- Figure 2-1: Major components in the front panel
- Figure 2-2: Major components in the back panel
- Figure 2-3: IP CAM connection diagram.
- Figure 2-4: Connect Ethernet cable to a switch/router.
- Figure 2-5: The installation CD disk
- Figure 2-6: The ID/Password card
- Figure 2-7: Running window of CamView program
- Figure 2-8: Pop-up play-video password window
- Figure 2-9: Unplug the Ethernet cable to enable the WiFi function
- Figure 3-1: Open the web configuration page from CamView software
- Figure 3-2: IP CAM Web configuration login page
- Figure 3-3: IP CAM Information page
- Figure 3-4: Video display page
- Figure 3-5: Network settings page for DHCP function
- Figure 3-6: Network settings page for fixed IP address
- Figure 3-7: WiFi security disabled page
- Figure 3-8: WiFi security enabled page
- Figure 3-9: WiFi testing page
- Figure 3-10: Advanced network settings page
- Figure 3-11: Video settings page
- Figure 3-12: 3GPP/RTSP enabled page
- Figure 3-13: Email/FTP Alarm page
- Figure 3-14: D/O Settings page
- Figure 3-15: NAS Storage settings page
- Figure 3-16: SD-Card settings page
- Figure 3-17: SD-Card information page
- Figure 3-18: Schedule Management page
- Figure 3-19: Led Control settings page
- Figure 3-20: System date/time settings page
- Figure 3-21: Admin settings page
- Figure 3-22: Firmware upgrade settings page
- Figure 3-23: Firmware upgrade status page
- Figure 3-24: System reboot settings page
- Figure 3-25: System reboot under-going page
- Figure 3-26: Safe mode information page
- Figure 3-27: Stick the reset button to set to the factory default

Pan/Tilt IP Camera

Figure 5-1: The IP camera body

Figure 5-2: Power Adaptor

Figure 5-3: Quick installation guide

Figure 5-4: Ethernet cable

Figure 5-5: Installation CD

Figure 5-6: ID/Password Card

Table A-1: List of tested Wireless AP/router devices

Table A-2: List of tested Wired NAT/router devices

1. Introduction

The Pan/Tilt IP Camera is designed with the “user-friendly” idea deep in mind. The user can install the IP camera easily on his/her home network and then access the IP Camera anywhere in the world through the accompanied video management software - CamView program without setting some complicated DNS name or changing the router's settings. It's just a plug & play action.

With pan/tilt support, users can monitor the video in a much larger viewing angle range.

For indoor surveillance and remote monitoring, the IP camera provides the best image quality in its class, and excellent performance. The Pan/Tilt IP Camera also provides the best bandwidth efficiency, it offers 640x480 resolution, 30 fps frame rate, real MPEG4 image compression ability. The built-in microphone enables remote users to not only view, but also listen for additional monitoring options.

With 3GPP/ISMA support, users can see the video of the IP camera on any 3G mobile phone anywhere, anytime. The big difference is that there is software for downloading to the mobile phone so that the fixed IP address is not needed for the IP camera. The video settings including frame rate, resolution and bandwidth could be different for PC monitoring and mobile viewing. With pan/tilt support, users can monitor the video in a much larger viewing angle range.

The NAS storage function can easily turn any NAS device to a NVR device. The schedule function provides full scheduling of email/ftp sending, motion detection and NAS recording event. With the built-in Web server, the IP Cameras can also be managed from a standard web browser on a Windows computer. With the ActiveX support, users can also see the video display on the Windows IE browser.

The Pan/Tilt IP Camera provides both wireless IEEE 802.11 b/g and wired Ethernet network interfaces for flexible installation. It supports the WEP and WPA (Wi-Fi Protected Access) security modes to provide the best security for wireless networks.

The Pan/Tilt IP Camera provides motion detection function. Users can easily setup this function and receive the notification with the snapshot images through email and/or ftp when some motion events are detected.

The Pan/Tilt IP camera is ideal for securing small businesses, home offices and residences over a local area network and/or the Internet.

The differences

It's very easy to see the video of the Pan/Tilt IP Camera, you only need to key in

Pan/Tilt IP Camera

the ID/Password of the IP CAM any where in the world, you do not need to remember the IP address or domain name or DDNS name or port number. And you do not need to modify the settings(like port mapping, fixed IP, DDNS, virtual server) of the NAT/router devices, it's just a plug & play usage.

So, the differences are the followings:

♦ Public IP address needed ?	No
♦ Dynamic DNS needed ?	No
♦ Port mapping in router?	No
♦ Virtual server in router ?	No
♦ UPnP support in router ?	No
♦ What's needed ?	ID and Password

2. Hardware description and quick installation/usage

The IP CAM is designed to be very easy to install and use. First, let's see the major components of the IP CAM products.

2.1. Major hardware components.

The major components on the **front panel** of the IP CAM products are the built-in microphone, lens and LEDs :

1. Microphone – for receiving the audio/voice. Effective distance is about 5 meters.
2. Lens – the lens is inside the mask and the focus of the lens is fixed, you do not need to spend time to adjust the focus, the effective focus range is from 30cm to infinity.
3. Status indication LED (red) – this LED is to indicate the Internet connection status. When the Internet connection is connected, the LED will be constant red light. If there is any Internet connection problem, the LED will be blinking red light.
4. Ethernet indication LED (blue) – this LED is to indicate if the Ethernet link is ok and packet traffic is sending/receiving. When the Ethernet cable is connected, the LED is constant blue light. When there is packet sending/receiving, the LED is blinking blue light.



Figure 2-1: Major components in the front panel

The major components on the **back panel** of the IP CAM products are the bracket screw jack, power jack, Ethernet jack and reset button:

1. Bracket screw jack – this is the position to screw in the bracket of the IP CAM. With the bracket, you can put the IP CAM on the desk, on the wall or on the ceiling. (Bracket not provided)
2. Power jack – this is the place to plug in the power adaptor. The power needed for this IP CAM is 5V/1.0A, please make sure you are using the correct power

Pan/Tilt IP Camera

adaptor.

3. Ethernet jack – this is the place to plug in the RJ45 Ethernet cable. When the Ethernet link is ok, the Ethernet indication LED on the front side will be blue light.
4. Reset button – this is the button to reset the IP CAM to default factory settings. You need to use a small stick like pencil or tooth stick to press the reset button for more than 3 seconds to enable the reset function. Usually when you forgot the administrator account, you will probably need to do this reset action to reset to the default factory settings. Please refer to section 3.19 for more details.
5. Wall mount – this is the place to hang the IP CAM on the ceiling or on the wall.
6. Antenna – this is the 802/11 b/g wireless antenna.
7. Digital I/O : one digital input and one digital output is provided to give users control to alarm speaker or to signal alarm detection.
8. Micro-SD card slot – for inserting the micro SD-Card. (support up to 16G bytes)

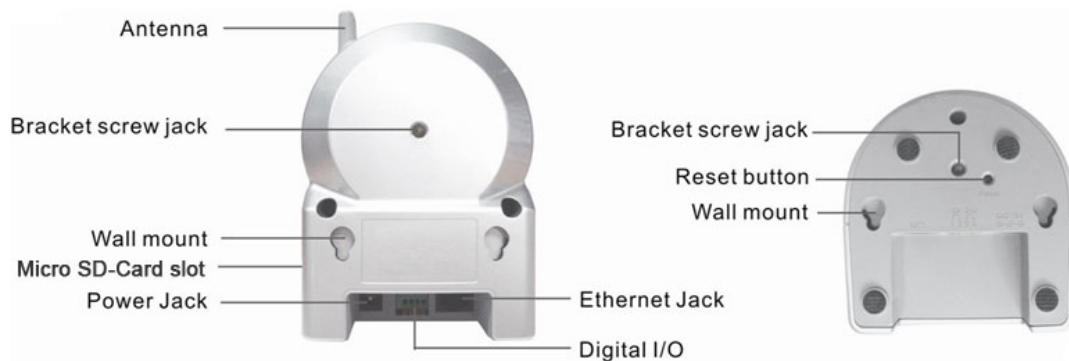


Figure 2-2: Major components in the back panel

2.2. Quick installation and usage

There are only three things that you need to do to see the video from the IP CAM.

1. Connect the IP CAM to the home/office network.
2. Install the CamView software on the notebook/PC.
3. Key in the ID/password of the IP CAM(from the ID/Password card) on the CamView, and then you can see the video.

First, Connect the IP CAM to the home/office network

Please connect the IP CAM accessories to the IP CAM body correctly, including the power adapter and Ethernet cable, as shown in Figure 2-3. And connect the other end of the Ethernet cable to the home network or office network. Usually, this Ethernet cable is plugged into a home NAT/router device or an Ethernet switch if in the office, as shown in Figure 2-4. Since the default settings of the IP CAM use DHCP function

Pan/Tilt IP Camera

and very often there is a DHCP server on most of the Home/office network, the IP CAM should be connected to the Internet immediately. The Internet status LED is constant red light to indicate this good connection status. If the LED is blinking, please refer to section 3.3~3.5 to try other network settings.



Figure 2-3: IP CAM connection diagram.

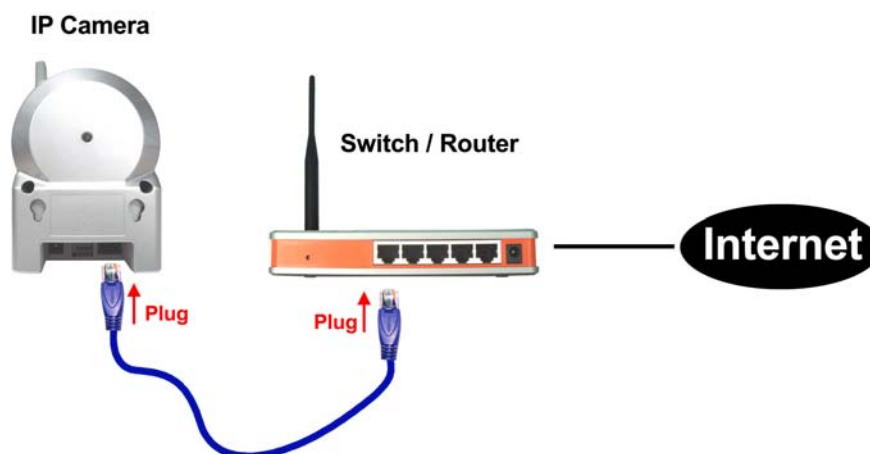


Figure 2-4: Connect Ethernet cable to a switch/router.

Second, Install the CamView software on the notebook/PC

Please insert the installation CD into the CD-ROM drive in your notebook or personal computer (must be running Microsoft Windows OS). Execute the program CamViewInstaller-xxx.exe on the disk. The program will pop-up some windows about the installation options, please press the “next” button to proceed with the installation. After the installation is complete, there will be a CamView icon on the desktop of your computer screen, please execute this icon. The CamView program will run immediately.



Figure 2-5: The installation CD disk

Third, Use CamView program to see the video

Figure 2-5 is the running window of the CamView program. If the computer and IP CAM is connected to the same network, the IP CAM ID will be displayed in the “Auto Search” list. You can double click the “Auto Search” to search all the connected IP CAMs any time. The only thing left right now for seeing the video is to double click the IP CAM ID item in the “Auto Search” list. For example, if the IP CAM ID is 001-001-029, you can then double click the 001001029 item in the “Auto Search” list to view the video. A window asking for password input will pop up. Please key-in the password in your ID/Password card into this field and click “ok”. The video will then be displayed on the window.



Figure 2-6: The ID/Password card

Notice :

1. You can modify this play-video password by entering into the web configuration pages. Please refer to section 3.6 for more information.
2. You can also add the IP CAM into the CameraList in the CamView software to have more convenient video display, please refer to the user manual of the CamView software for more functions.

Pan/Tilt IP Camera

Seeing the video in a remote location

After the IP CAM is installed and you can see the video from the CamView software in the local network, it's very easy to see the video in a remote location. All you need to do is add a camera item in the "CameraList" folder of the CamView software, key in the IP CAM ID and Password(from the ID/Password card). And then double click this camera item. You will then see the Camera video immediately. No further NAT/router setting modifications are needed.

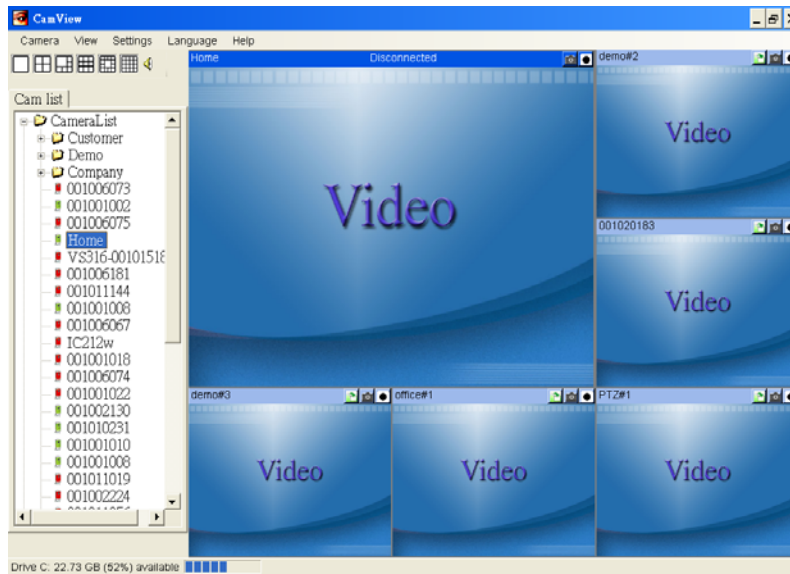


Figure 2-7: Running window of CamView program

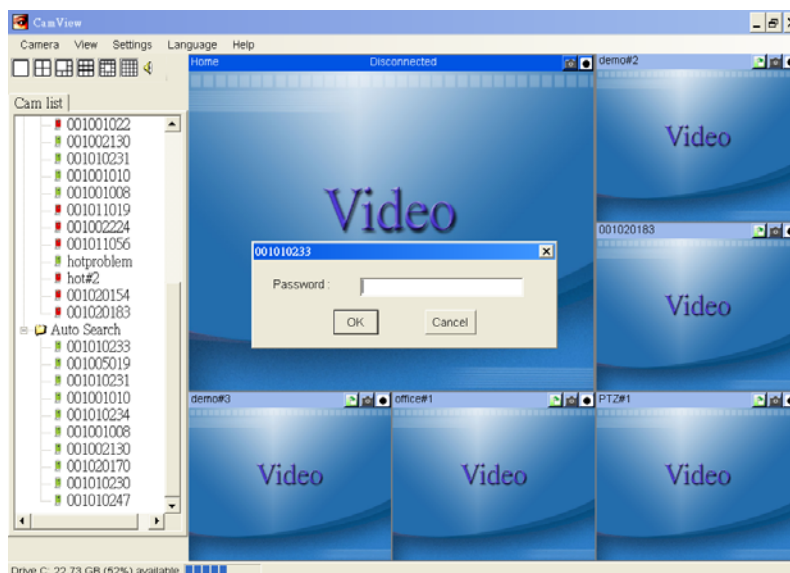


Figure 2-8: Pop-up play-video password window

2.3. Wireless connection

The IP CAM can also be connected to the home/office network through the 802.11 b/g wireless connection. There are only three things that you need to do to have the wireless connection:

1. Set the WiFi security settings on the web configuration page.
2. Test if the WiFi settings are correct.
3. Unplug the Ethernet cable.

First, set the WiFi security settings on the web configuration page.

Make sure there is a WiFi router or AP on your home or office network. Write down the WiFi security parameters used in this WiFi AP/router, including the SSID , security mode, encryption protocols and the “key” values. The supported WiFi security mode of the IP CAM is WEP(64 bits and 128 bits) and WPA-PSK(TKIP and AES). In most of the home/office WiFi environment, this is quite enough.

The easiest way to set the WiFi settings on the IP CAM is through CamView software. Right-click the searched IP CAM in the “Auto Search” list and click the “Web Configure” to open the login window of the IP CAM. Fill in all the WiFi security parameters you have written down. The WiFi configuration is complete now.

Please refer to section 3.4 for more detailed description if needed

Second, test if the WiFi settings are correct

You can now test if the above WiFi settings are correct. Click the “WiFi test” on the “WiFi Security” settings web page. The testing result will be displayed in less than 60 seconds. If the test is failed, please check the WiFi security parameters and test again.

Third, unplug the Ethernet cable

If the WiFi test is successful, you can then enable the WiFi connection by unplugging the Ethernet cable from the IP CAM. The IP CAM will detect the Ethernet cable unplugged condition and start the WiFi connection. After the WiFi is connected, the IP CAM will connect to the Internet immediately.

Notice :

1. Please remember that the WiFi connection will use a different IP address, you will need to do the “Auto Search” function in the CamView again to find the IP CAM again after the WiFi is connected.
2. If you want to switch back to the wired Ethernet connection, just plug in the Ethernet cable into the IP CAM again. Do not need to disable the WiFi function on the web pages.

Pan/Tilt IP Camera

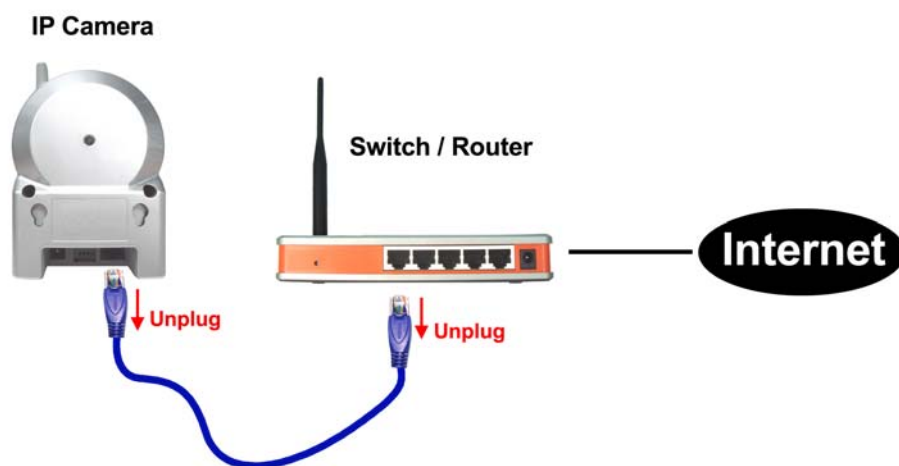


Figure 2-9: Unplug the Ethernet cable to enable the WiFi function

3. Web configurations

You can login into the web configuration page by directly key-in the IP address of the IP CAM or right-click the searched IP CAM in the “Auto Search” list of the CamView software and click the “Web Configure” to open the login window of the IP CAM.

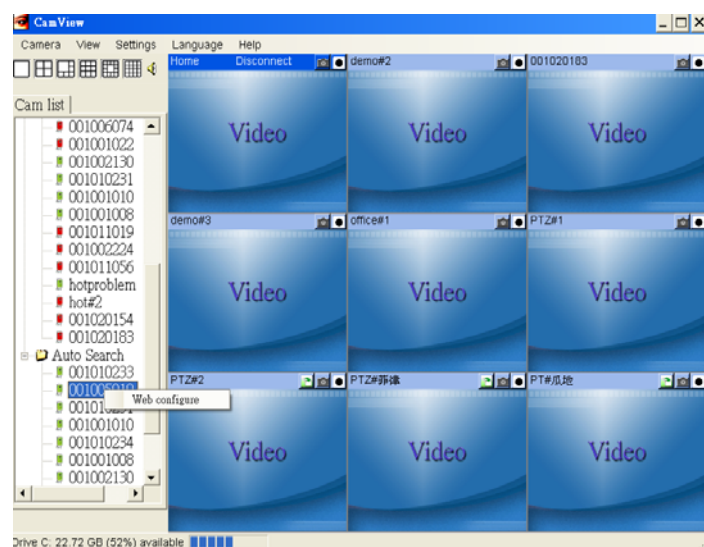


Figure 3-1: Open the web configuration page from CamView software

The default login account is “admin”, leave the Password field empty.



Figure 3-2: IP CAM Web configuration login page

3.1. Information

The first page of the web configuration of the IP CAM is the information page. You can see the model name/firmware version, IP CAM ID, registration status, network type and current video settings(bandwidth, resolution) in this page.

The IP CAM can be viewed remotely by the CamView software only when the IP CAM is registered. If this IP CAM is not registered, please check the Ethernet wiring of your network environment. The “Network type” field displays the network connection(wired or wireless) and method(DHCP, PPPoE or static ip) the IP CAM is running. The “Video users” field displays the number of connected video viewing users.

IP CAM Information	
Model	wireless / v020202
IP CAM ID	001-001-011
Registration status	Registered(3+uPnP)
Network type	Wired(DHCP) - (ip=10.10.10.138)
Video user	0
Video resolution	640 x 480
Video bandwidth	512K bps
Email/ftp Alarm	off
NAS Record	Not Recording
SD-Card Record	Not Recording
Mac Address(Hex)	00:1B:C7:00:00:0A
WiFi Mac Address(Hex)	00:11:E2:FB:24:60

Figure 3-3: IP CAM Information page

3.2. Video Display

This display page allows you to view the video display and control the pan/tilt movement of the IP camera. For the first time use of this display on a computer, an activeX component will be automatically downloaded into the browser. This could take some time, depends on the internet speed. The component is downloaded from a public domain, so that the computer must be connected to the Internet.

If you want to modify the video display screen size, please refer to section 3.6 for more details.



Figure 3-4: Video display page

Pan/tilt control:

1. Control by CamView – this is to enable/disable the pan/tilt control function by CamView software.
2. Speed – this is to control the pan/tilt moving step distance for each pan or tilt movement, fast means larger step movement.
3. Pan – click this button will let the IP CAM do one horizontal pan scan movement.
4. Tilt – click this button will let the IP CAM do one vertical tilt scan movement.
5. Patrol control – you can set up to 5 patrol points that will let the IP CAM to patrol through these patrol points. To set the patrol point, first move the IP CAM to the desired view position by clicking the different arrow buttons, and then press the “position” button of the specific patrol point. The (x,y) axis values will be updated

Pan/Tilt IP Camera

accordingly. You can click the (x,y) axis of the patrol point to direct the view to this specific patrol point directly. After the patrol points are set, you can click the "Patrol" button to start the patrol through these points one time.

6. Stay xx secs – this is the time for each patrol point to stay before going to next patrol point.
7. Patrol – click this button to start the patrol movement of the IP CAM.
8. Stop – this will stop the patrol movement.

3.3. Network

The Network page allows you to modify the network settings of the wired Ethernet. The default settings use DHCP to obtain an IP address automatically. In most of the home and office network environment, there is a DHCP server running. In this situation, by using this default settings, the IP CAM can work immediately in most of the time.

If the Ethernet cable is unplugged, the IP CAM will lose connection. But as soon as the Ethernet cable is plugged in again, the IP CAM will obtain a new IP address immediately.


The screenshot shows the 'Network Settings (For wired ethernet)' page. On the left is a blue sidebar with a menu: Information, Network (selected), Wired Network (selected), WiFi Security, Advanced, Video, Schedule, Admin, and a Language dropdown set to English. The main content area has a green header 'Network Settings (For wired ethernet)'. It contains two sections: 'Obtain an IP address automatically' (selected) and 'Use the following IP address'. The IP address fields are set to 192.168.1.123, Subnet mask to 255.255.255.0, and Default gateway to 192.168.1.1. Below this is another section for DNS: 'Obtain DNS server address automatically' (selected) and 'Use the following DNS server address'. The Preferred DNS server is 168.95.1.1 and the Alternate DNS server is 168.95.192.1. A 'Save & Apply' button is at the bottom.

Figure 3-5: Network settings page for DHCP function

If the network environment does not support DHCP function, you will need to set the network settings of the IP CAM manually. Please fill all the fields including “IP address”, “Subnet mask”, “Default gateway” and “DNS server” to let the network work. All these settings must be correct for your network environment, otherwise the IP CAM can not work.

The default setting is “Obtain an IP address automatically”.

Pan/Tilt IP Camera



Seeing the video from anywhere

The solution to have your cameras
the easiest to push the buttons
this is the configuration that enables viewing cameras
also in the world of wireless technologies.
Configure and control, mobile and convenient to use.
Check out the new versions of our software for Android & IOS.

Pan/tilt IP Camera

- Information
- Network
 - Wired Network**
 - WiFi Security
 - Advanced
- Video
- Schedule
- Admin

Language: English

Network Settings(For wired ethernet)

☐ Obtain an IP address automatically

☒ Use the following IP address

IP address	<input type="text" value="192"/>	<input type="text" value="168"/>	<input type="text" value="1"/>	<input type="text" value="123"/>
Subnet mask	<input type="text" value="255"/>	<input type="text" value="255"/>	<input type="text" value="255"/>	<input type="text" value="0"/>
Default gateway	<input type="text" value="192"/>	<input type="text" value="168"/>	<input type="text" value="1"/>	<input type="text" value="1"/>

☐ Obtain DNS server address automatically

☒ Use the following DNS server address

Preferred DNS server	<input type="text" value="168"/>	<input type="text" value="95"/>	<input type="text" value="1"/>	<input type="text" value="1"/>
Alternate DNS server	<input type="text" value="168"/>	<input type="text" value="95"/>	<input type="text" value="192"/>	<input type="text" value="1"/>

Save & Apply

Figure 3-6: Network settings page for fixed IP address

3.4. WiFi security

You can use the wireless to connect the IP CAM to the network. If your network environment has a 802.11 b/g router or AP running, you can check the “Enable WiFi function” button to use the wireless.

Figure 3-7: WiFi security disabled page

In order to use the wireless network, you need to fill the following fields:

1. SSID – this is the ID of the wireless router or AP of your wireless network environment, must be set correctly.
2. Security mode – this is the security mode used in the wireless router or AP. Need to choose one of the three modes – None, WEP and WPA-PSK.

WEP : Wireless Encryption Protocol.

WPA : WiFi Protected Access.

PSK : Pre-Shared Key.

TKIP : Temporal Key Integrity Protocol.

AES : Advanced Encryption Standard.

3. WEP mode – when the WEP mode is chosen, you need also choose between 64-bit(5 char), 64-bit(10 hex), 128-bit(13 char) and 128-bit(26 hex) encryption mode, and then fill the WEP key correctly.
4. WPA-PSK mode - when the WPA-PSK mode is chosen, you need also choose between TKIP and AES encryption mode, and then fill the WPA-PSK key correctly.

Pan/Tilt IP Camera

All the fields in this page must be filled correctly with the same settings the wireless router or AP using.

Seeing the video from anywhere

Pan/tilt IP Camera

Information

Network

Wired Network

WiFi Security

Advanced

Video

Schedule

Admin

Language: English

WiFi Security Settings

☒ Enable WiFi function ☐ Disable WiFi function

SSID: test

Security mode: ☐ None ☒ WEP ☐ WPA-PSK(WPA personal)

WEP Encryption: 64 bits(10 hex digits)

WEP Key: 1234567890

WPA Encryption: TKIP

WPA-PSK Key:

Save & Apply IP address WiFi test WiFi Scan

Figure 3-8: WiFi security enabled page

You can click the “WiFi test” button to check if the IP CAM can connect to the wireless network for these settings. You will need to unplug the Ethernet cable to enable the wireless connection after the “WiFi test” is successful.

You can click the “WiFi scan” button to scan for all the available access points nearby.

After the setting and “Save&Apply”, do not need to restart the IP CAM to let the WiFi work, only need to unplug the Ethernet cable.

The default setting is “Disable WiFi Function”.

Pan/Tilt IP Camera

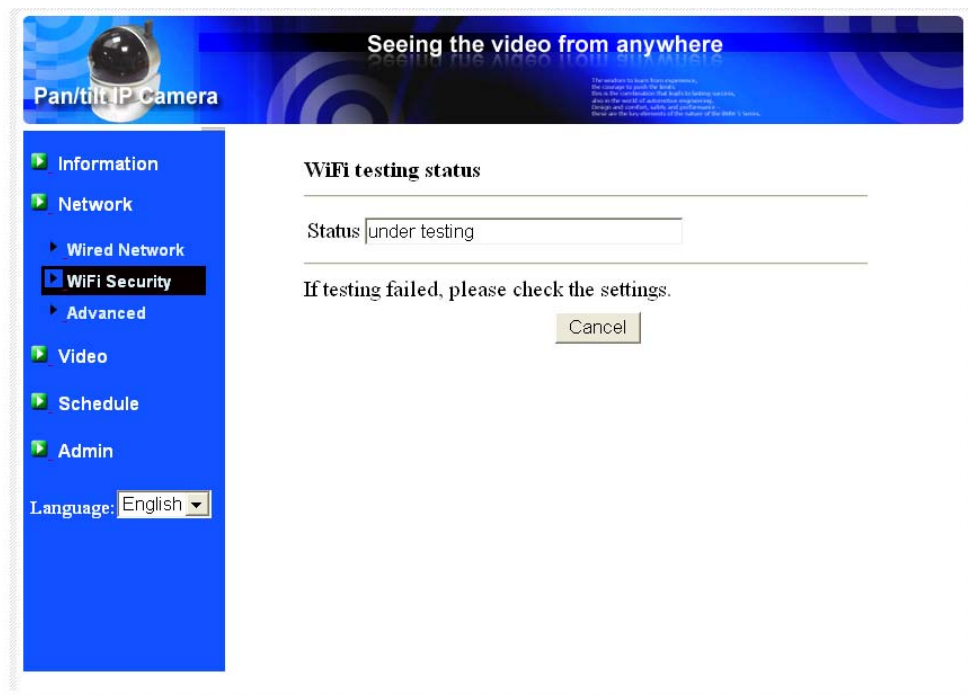


Figure 3-9: WiFi testing page

3.5. Advanced Network

In some special situation, your network environment only provides PPPoE connection(ADSL service), there is no NAT/router available. You will then need to set the PPPoE settings in the “Advanced Network” page. Only the PPPoE username and password are needed to let PPPoE work. After the “Save&Apply” button is pressed, the PPPoE function will work immediately. You can check the “Registration status” in the “Information” page to see if the IP CAM is registered using the PPPoE connection.

Please be noticed that the DHCP or static IP settings in the “Network” page can work together with the PPPoE connection. Only that the PPPoE has higher priority, so, if the PPPoE is working, the IP CAM will use PPPoE to connect to the Internet.

The default setting is “Disable PPPoE”.

Seeing the video from anywhere

Pan/tilt IP Camera

Information

Network

- Wired Network
- WiFi Security
- Advanced**

Video

Schedule

Admin

Language: English

Advanced Network Settings

☐ Disable PPPoE

☒ Use PPPoE to get an IP address

Username:

Password:

Save & Apply

Figure 3-10: Advanced network settings page

3.6. Video Settings

The IP CAM is designed to provide high quality video for viewing from CamView software. In this page, you can modify some settings related to the video viewing:

1. Password(play video) – this is the password needed for viewing the video from the CamView software. Together with the IP CAM ID, you can view the video of this IP CAM anywhere in the world through the Internet.
2. Internet speed – this is the Internet bandwidth of your network environment. Higher value will generate higher video quality. But if your internet connection cannot provide more bandwidth than the specified value, the video quality could degrade. So, please key in a value that is lower than your internet bandwidth.
3. Select resolution & frame rate automatically – you can let the system select the suitable video resolution and frame rate automatically for you. The selection is based on the “Internet speed” value. This is the recommended default setting.
4. Resolution – there are three choices : 160x120, 320x240 and 640x480. If you decide to choose the value manually, you can choose one of the three values. But, please be noticed that if the Internet speed is slow(low value), high resolution(640x480) or frame rate could cause very bad video quality.
5. Frame rate – the video frame display rate. Higher value means faster movement and continuity in the video display.
6. Favor/Preference – choose between “Video motion” and “Image quality”. When the real bandwidth is not enough for the selected “Internet speed”, the system will need to degrade the video motion or image quality. This selection will decide if the user wants to maintain the “video motion” or “image quality” when the internet speed is not good enough.
7. Brightness – the brightness of the video, lower value means darker display.
8. Sharpness – the sharpness of the video, higher value means sharper video.
9. Low light sensitivity – The low light sensitivity could be normal, high or very high. When the low light sensitivity is high, the system could see better video clearance under low light situation, but the moving object will not be very clear under this low light environment. Under very dark environment, set to “very high” will get better video clearance. The default value of this setting is “high”.
10. Video color – choose between “colored” and “black&white”.
11. Video reversal – can do “vertical” and/or “horizontal” video reversal display, this is needed if the ip camera is hung on the ceiling or wall.
12. Outdoor/Indoor video – for better video display quality, modify this setting when taking indoor or outdoor video. The default setting is “Outdoor video”, in most cases, this is also ok for indoor usage. Under some special cases, there could be some strip lines on the video display when the IP camera is taking indoor video. In

Pan/Tilt IP Camera

this situation, change the setting to “Indoor video” will solve the problem. Please also be noticed that in “Indoor video” setting, the video display of outdoor view is very vague. For indoor usage, if there is strong sun light into the room, please select the “Indoor+sun light” choice.

13. Enable/disable audio microphone – you can enable or disable the audio microphone on the IP CAM. If disable, there will be no voice on the CamView video viewing.
14. Enable/disable time display on video – if enabled, the date/time of the system will be displayed on the left-upper corner of the video.

When this modification is “Save&Apply”ed, it works immediately, but all the connected video viewing users will be disconnected.

Pan/tilt IP Camera

Seeing the video from anywhere

Information
Network
Video
Display
Video Settings
3GPP/RTSP
Schedule
Admin

Language: English

IP CAM ID: 001-001-011

Password(play video): ipcam

Internet speed: 512Kbps

☒ Adjust resolution & frame rate automatically
☐ Use the following values

Resolution: 640x480(VGA)

Frame rate: 10fps

Favor/Preference: Video Motion

Brightness: 5(medium)

Sharpness: 5(medium)

Low light sensitivity: high

Video color: colored

Video reversal: ☐ Vertical ☐ Horizontal

☒ Outdoor video ☐ Indoor video ☐ Indoor+Sun light

Figure 3-11: Video settings page

3.7. 3GPP/RTSP settings

The IP CAM is able to be viewed from a 3G mobile phone, for detailed settings on the 3G mobile phone, please refer to Appendix E.

Users can disable the 3G mobile access ability in this page. After the 3GPP/RTSP feature is disabled, no 3G mobile phone is allowed to access the video of the IP camera. When this is disabled, the rtsp stream with MPEG2 audio is still working, please refer to Appendix F for more details about rtsp stream with MPEG2 audio.

When the 3GPP is enabled, the video frame rate, resolution and bandwidth for 3G mobile access could be set independently from the video settings for CamView(PC) access. The maximum allowed resolution is 352x255 and maximum allowed bandwidth is 256 kbps. When the audio is enabled for both 3GPP and CamView(PC) and the video/audio is displayed in CamView, the audio will be disabled in 3G mobile display.

The “Access URL” line is the url address for 3G mobile phone to input for seeing the video of the IP camera. Different 3G mobile may need to input this url in different way, detailed information could be found in the user manual of different 3G mobiles. Please be noticed that usually public IP address is needed for the IP camera, so that the 3G mobile could access the IP camera's video.

The default setting is “Enable 3GPP/RTSP”.

Seeing the video from anywhere

Pan/tilt IP Camera

Information
Network
Video
 Display
 Video Settings
 3GPP/RTSP
Schedule
Admin
Language: English

3GPP/RTSP Settings

☒ Enable 3GPP/RTSP ☐ Disable 3GPP/RTSP

3GPP bandwidth: 64Kbps

☒ Select resolution & frame rate automatically
☐ Use the following values

Resolution: 320x240(QVGA)
Frame rate: 5 fps

☐ Enable audio ☒ Disable audio

Access URL: rtsp://10.10.10.138/001001011.ipcam

* Notice : usually, public IP address is needed for 3G mobile access!

Save & Apply

Figure 3-12: 3GPP/RTSP enabled page

3.8. Email/ftp alarm

The IP Camera provides the Email/ftp function, you can enable or schedule the Email/ftp ability in this page, the IP Camera will then send out an email with a jpeg picture attached in the email and/or send out the jpeg picture file to a ftp server. The related settings are explained below:

1. Email/FTP trigger – choose between “motion”, “D/I”, “schedule” and “disable”
 - A. If “motion” is selected, it means that when there is a motion detected, the system will send out the email and/or ftp with the captured video snapshot.
 - B. If “D/I” is selected, it means that when there is a Digital input alarm detected, the system will send out the email and/or ftp with the captured video snapshot. If the D/I alarm is constantly on, the IP camera will keep sending out email/ftp message every second for up to 30 seconds.
 - C. If “schedule” is selected, it means that the email/ftp alarm detection and triggering will be scheduled by the “scheduling” in section 3.12.
 - D. “disable” will disable the email/ftp alarm.
2. Motion sensitivity – there are three possible choices in this field.

“High” means high sensitivity, i.e., the motion detection is triggered by a very small movement in the video image. If “High” is selected and the size of the moving object is larger than about 1% of the whole video area, it is detected. Please be noticed that the real size of the object could be large or small, anyway, the detection is only based on the relative size of the object. Probably a small pencil moving near the IP Camera could be detected, but a moving car far away from the IP Camera could not be detected.

“Low” means low sensitivity, i.e., the motion detection is triggered by a very large movement. If the size of the moving object is larger than about 10% of the whole video area, it is detected. “Median” means 3% to trigger the detection.
3. Send email message – if this item is enabled, the IP Camera will send out an email message with the jpeg picture attached to the specified email account.
4. Email recipient – this is the email address to receive the detection notice message. An email message with the jpeg picture file named by the date/time of the triggered moment will reach this address.
5. SMTP server – this is the SMTP server that will help to transfer the email message. This server is irrelevant to the “Email recipient” address.
6. SMTP username/password – this is the account to use the SMTP server to transfer the email message. The SMTP server and username/password account are only for transfer the email message to the “Email recipient”, the “Email recipient” could be on another email server or any reachable email address. The

Pan/Tilt IP Camera

username and password fields could be left empty if no authentication is needed for the SMTP server.

7. SMTP server test – after the settings are filled, you could press “SMTP server test” to check if all the settings are correct.
8. Send FTP message – if this item is enabled, the IP Camera will send out a jpeg picture file to the specified ftp account.
9. FTP server – this is the FTP server address to receive the jpeg file.
10. FTP username/password – this is the username/password to login into the FTP server, so, this triggered jpeg file will be allowed to reach this FTP server.
11. Remote folder – the jpeg file will be put under this folder of the FTP server.

When this modification is “Save&Apply”ed, it works immediately, but all the connected video viewing users will be disconnected.

The default setting is “Disable”.

The screenshot shows the 'Email/FTP Alarm Settings' page of a Pan/Tilt IP Camera web interface. The page has a blue header with a camera icon and the text 'Seeing the video from anywhere'. A left sidebar contains a menu with options: Information, Network, Video, Schedule, Email/ftp Alarm (selected), D/O Alarm, NAS Settings, SD-Card, Scheduling, Admin, and a Language dropdown set to English. The main content area is titled 'Email/FTP Alarm Settings' and contains the following fields and controls:

- Email/FTP Trigger:** Radio buttons for Motion (selected), D/I, Schedule, and Disable.
- Motion sensitivity:** A dropdown menu set to 'medium'.
- Send Email message:** A checked checkbox.
- Send FTP message:** An unchecked checkbox.
- Email recipient:** A text input field containing 'guest@test.com'.
- SMTP server:** A text input field containing 'test.com'.
- port:** A text input field containing '25'.
- SMTP Username:** A text input field containing 'guest@test.com'.
- SMTP Password:** A text input field with masked characters '....'.
- FTP Server:** A text input field.
- Username:** A text input field.
- Password:** A text input field.
- Remote folder:** A text input field.

At the bottom of the form are two buttons: 'Save & Apply' and 'SMTP server test'.

Figure 3-13: Email/FTP Alarm page

3.9. DI/DO settings

The video server product provides DI/DO alarm function, a video motion detection or the digital input signal could trigger the digital output alarm. The duration of the alarm could also be set. The related settings are explained below:

1. Digital input – can select the normal status of the digital input as either open circuit or closed circuit. The current status is also displayed.
2. Digital output – can select the normal status of the digital output as either open circuit or closed circuit. The current status is also displayed.
3. D/O alarm – select the trigger mode of the digital out alarm
 - A. Motion trigger – if this is selected, the digital output alarm signal will be active when video motion is detected. The detection sensitivity is set In the “motion detection” page.
 - B. D/I trigger – if this is selected, the digital output alarm signal will be active when the digital input signal is detected..
 - C. Schedule – if this is selected, the digital output alarm is scheduled according to the settings of scheduling in section 3.11.
 - D. Active – force the digital output to be active.
 - E. Normal–force the digital output to be normal.
4. D/O Alarm duration – this is the digital output alarm duration for each trigger.

DI/DO Settings	
Digital Input	Normal Status : Open circuit Current Status : Normal
Digital Output	Normal Status : Open circuit Current Status : Normal
D/O Alarm	<input type="radio"/> Motion <input type="radio"/> D/I <input type="radio"/> Schedule <input type="radio"/> Active <input checked="" type="radio"/> Normal
D/O Alarm duration	30 secs

Save & Apply

Figure 3-14: DI/DO Settings page

3.10. NAS settings

The IP Camera provides the recording of the video files into a standard NAS (Network Access Storage) device. The IP camera connects to the NAS device using the standard LMX_NS/CIFS/SSN protocols that are the same as the Microsoft Windows network neighborhood protocols. This makes the IP camera easily record the video files to all the standard NAS devices in the market. Since there are a lot of different choices, including prices and scales, users can decide by themselves which is best for their needs. By using this function, the standard NAS device is becoming a NVR (Network Video Recorder) device.

Notice : when the IP camera is doing NAS recording, this is counted as one video user. Please refer to appendix B about allowed maximum video users.

1. If the “Always Recording” is selected, the system will start to record to the NAS storage device immediately and keep recording always. If the “Schedule Recording” is selected, the system will do the NAS recording according to the “scheduling” in section 3.12. “Disable Recording” will disable this NAS recording.
2. When doing the NAS recording, the system will check the free disk space of the NAS device. If the free disk space is less than the specified number, the system will do “Circular recording”(overwrite the oldest recorded files of this IP camera in the NAS device) or “Stop recording” as selected. If the “keep recorded video for xx days” is selected, the system will do circular recording and over write the recorded video files older than xx days ago.
3. The IP camera can connect to the NAS device by using the “NAS name” or “NAS IP address”. If the NAS device and the IP camera are in the same local area network, the IP camera can automatically locate and connect to the NAS device by the “NAS name”. If the NAS device uses a fixed IP address(either in the local area network or in the public internet), the IP camera can connect to it by the “NAS IP address”.
4. The “Shared folder name” is the folder in the NAS device that will record the video files of the IP camera.
5. The “NAS access account” and “NAS access password” are the username and password to login into the specified “Shared folder name” of the NAS device.

In the Microsoft Windows environment, you can access to the NAS device by keying the URL address [\\\"NAS name\"\\shared folder name](#) or [\\\"NAS IP address\"\\shared folder name](#) in the windows Internet Explorer, and then key in the “NAS access account” and “NAS access password” to the prompted login window. The video files are recorded under the subfolder IPCamRecordFiles/Recording/ID-ID,

Pan/Tilt IP Camera

where ID is the ID of this IP camera. All the recorded files are with the name of hhmmss.crf format, where hh is the hour, mm is the minute, ss is the second of the starting time of the recording video. The files are segmented every five minutes. Users can use the free bundled CamPlay software to play back the video files.

Seeing the video from anywhere

Pan/tilt IP Camera

NAS Storage Settings

☐ Always Recording ☒ Schedule Recording ☐ Disable Recording

☒ Keep recorded video for 3 days (Circular recording)

☐ If free disk less than 0 GB ☐ Circular recording ☒ Stop recording

☒ Use NAS name nas_storage

☐ Use NAS IP address 0 . 0 . 0 . 0

Shared folder name test

NAS access account test

NAS access password test

Language: English

Save & Apply

Figure 3-15: NAS Storage Settings page

3.11. SD-Card settings

The IP camera provides the recording of the video files into a standard Micro SD-Card. Since this recording is directly to the SD-Card, there is no network packets loss problem when recording to remote device through internet.

Notice : when the IP camera is doing SD-Card recording, this is counted as one video user. Please refer to appendix B about allowed maximum video users.

1. If the “Always Recording” is selected, the system will start to record to the SD-Card immediately and keep recording always. If the “Schedule Recording” is selected, the system will do the SD-Card recording according to the “scheduling” in section 3.12. “Disable Recording” will disable this SD-Card recording.
2. When doing the SD-Card recording, the system will check the free disk space of the SD-Card. If the disk space is full (no free disk space), the system will do “Circular recording”(overwrite the oldest recorded files in the SD-Card) or “Stop recording” as selected.
3. SD-Card status – the SD-Card inserted or removed status is displayed here.
4. SD-Card files – as shown in fig.3-14, all the recorded video files with information including file name, recorded time and file size are listed in this page under the directory of each date. The recorded file could be separately downloaded or deleted on this page.

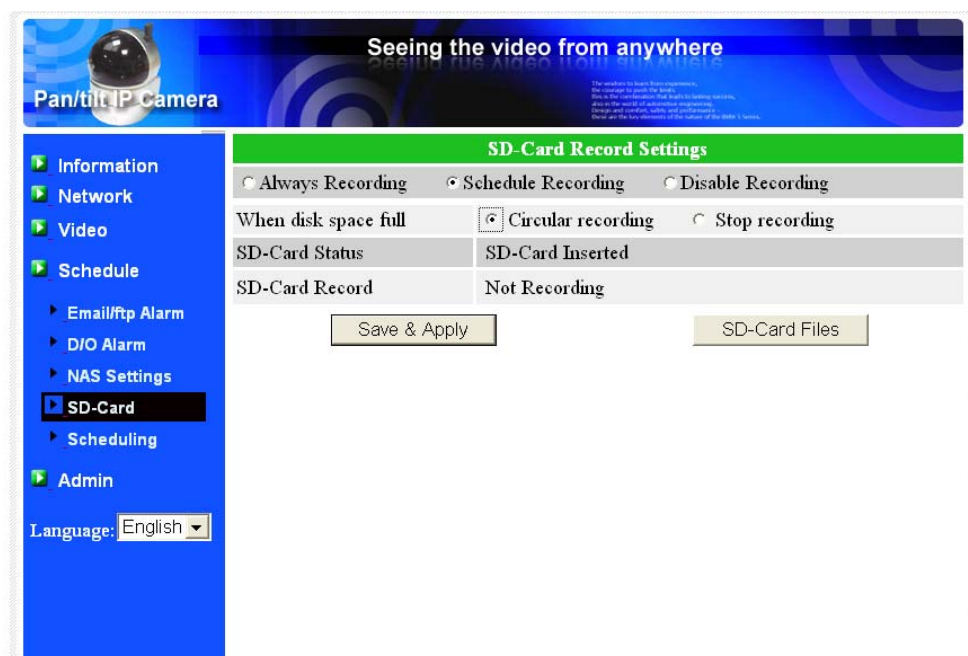



Figure 3-16: SD-Card Settings page

Pan/Tilt IP Camera



Seeing the video from anywhere

The smallest in size IP camera,
the easiest to install the easy
the most powerful the most reliable the most
also in the world of surveillance equipment,
the most complete the most comprehensive
and the best choice of the future of the IP camera.

Pan/tilt IP Camera

- Information
- Network
- Video
- Schedule
 - Email/ftp Alarm
 - D/O Alarm
 - NAS Settings
 - SD-Card**
 - Scheduling
- Admin

Language: English

SD-Card Information

Capacity/Used/Available 1919 MB / 1350 MB / 569 MB (30 %)

SD-Card Record Files

20090317				
163459.crf	Download	Delete	16:34:59	39.89 MB
164004.crf	Download	Delete	16:40:04	41.65 MB
164512.crf	Download	Delete	16:45:12	40.68 MB
165017.crf	Download	Delete	16:50:17	41.26 MB
165521.crf	Download	Delete	16:55:21	37.34 MB
170027.crf	Download	Delete	17:00:27	35.20 MB
181152.crf	Download	Delete	18:11:52	36.99 MB
181658.crf	Download	Delete	18:16:58	38.00 MB
182204.crf	Download	Delete	18:22:04	37.53 MB
182712.crf	Download	Delete	18:27:12	36.12 MB
183219.crf	Download	Delete	18:32:19	37.33 MB
183725.crf	Download	Delete	18:37:25	36.72 MB
184232.crf	Download	Delete	18:42:32	36.16 MB
184739.crf	Download	Delete	18:47:39	36.64 MB
185246.crf	Download	Delete	18:52:46	37.15 MB
185752.crf	Download	Delete	18:57:52	36.51 MB
190258.crf	Download	Delete	19:02:58	36.28 MB
190805.crf	Download	Delete	19:08:05	36.55 MB

Figure 3-17: SD-Card information page

3.12. Scheduling

The IP camera provides the scheduling function for the motion detection triggered email/ftp sending and/or the NAS recording with the individual parameters set in the . “Email/ftp alarm” settings and the “NAS settings” page. Totally 12 schedule list items are allowed. There is no conflict check for the scheduling, it means that the scheduling time could be overlapped, and the IP camera will do all the scheduled events during the overlapped time period. For the scheduling of the Email/ftp sending and/or NAS recording, the “Schedule” option must enabled in the “Email/ftp alarm” settings and/or the “NAS settings”.

1. Schedule list – all the scheduling are listed in this area. Each listed item can be modified or deleted by pressing the “Edit” or “Delete” button.
2. Email/ftp Alarm – for each scheduling, if this is selected and the “Motion triggered” and/or “D/I triggered” is enabled, the IP camera will trigger the email/ftp sending in the scheduled time period when the video motion is detected and/or digital input alarm is detected.
3. D/O Alarm – for each scheduling, if this is selected and the “Motion triggered” and/or “D/I triggered” is enabled, the IP camera will trigger the D/O alarm in the scheduled time period when the video motion is detected and/or digital input alarm is detected.
4. NAS Record – for each scheduling, if this is selected, either “Continuous” or “Motion triggered” or “D/I triggered” could be enabled. For “Continuous”, it means that the IP camera will do the video recording to the NAS device during the whole scheduled period. For “Motion triggered” and/or “D/I triggered”, it means that the IP camera will do the video recording to the NAS device for 30 seconds during the scheduled period each time when the video motion is detected and/or digital input alarm is detected.
5. SD-Card Record – for each scheduling, if this is selected, either “Continuous” or “Motion triggered” or “D/I triggered” could be enabled. For “Continuous”, it means that the IP camera will do the video recording to the SD-Card during the whole scheduled period. For “Motion triggered” and/or “D/I triggered”, it means that the IP camera will do the video recording to the SD-Card for 30 seconds during the scheduled period each time when the video motion is detected and/or digital input alarm is detected.
6. For the scheduling period, can choose between “Every week”, “Every day” or “Fixed time” :
 - A. For “Every week”, can choose week days of the week and set the time duration of each day.

Pan/Tilt IP Camera

- B. For “Every day”, can set the time duration of every day for the scheduling.
- C. For “Fixed time”, can set the starting date/time and the end date/time of the scheduling period.

**Pan/tilt IP Camera**

Seeing the video from anywhere

Information

Network

Video

Schedule

Email/ftp Alarm

D/O Alarm

NAS Settings

SD-Card

Scheduling

Admin

Language: English

Schedule Management

Schedule list

DS Every week xooooxx 07:00 - 21:00

Edit

Delete

☐ Email/ftp Alarm

Email/ftp schedule not enabled

☒ D/O Alarm

☒ Motion triggered ☐ D/I triggered

☐ NAS Record

Nas schedule not enabled

☒ SD-Card Record

☐ Continuous ☒ Motion triggered ☐ D/I triggered

☒ Every week

☐ Sun ☒ Mon ☒ Tue ☒ Wed ☒ Thu ☐ Fri ☐ Sat

☐ Every day

During time 07 : 00 ~ 21 : 00

☐ Fixed time

Start time : 2008 / 02 / 01 07 : 00

End time : 2008 / 02 / 01 21 : 00

Add Schedule

Figure 3-18: Schedule management page

3.13. Led Display Control

The IP CAM provides the Led Display Control function, you can enable or disable the led display/indication on the front panel of the IP cam device. The related settings are explained below:

1. Normal led display – select this to enable the status led and ethernet led display.
2. Turn off led display always – select this to disable the status led and ethernet led display.
3. Turn off led display after network connected – select this then the led will display when the Internet connection has some problem, the led display will be off when the Internet connection is successful.

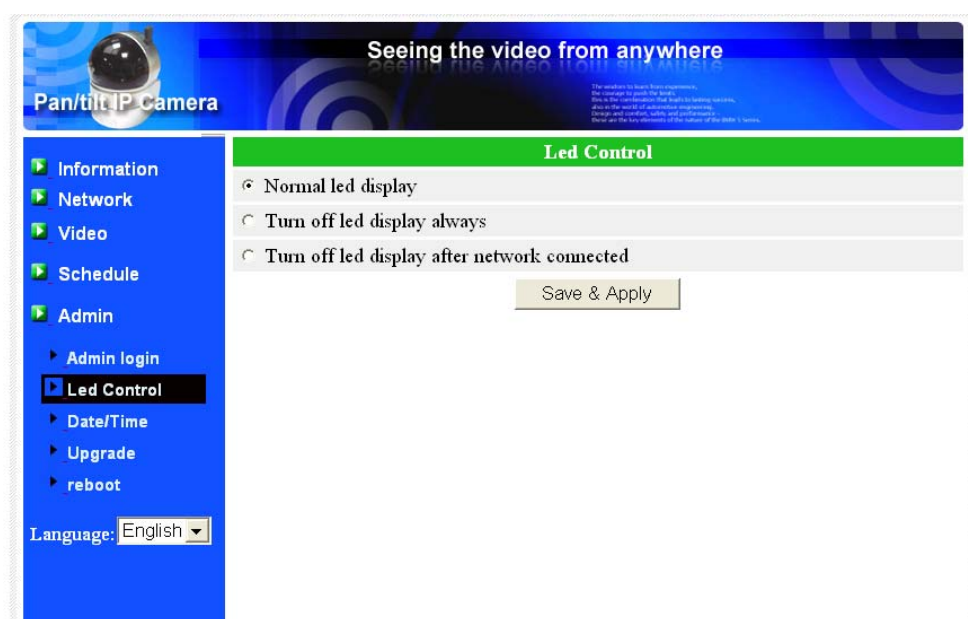


Figure 3-19: Led Control settings page

3.14. Date/Time

The IP CAM can synchronize the date/time with the universally available time server(for example stdtime.gov.tw) through NTP protocol. The date/time will then be corrected with the time server anytime when the Internet is connected.

Users can choose the different TimeZone of their areas to display the correct time. For some TimeZone areas, the “Daylight Saving Time” could be enabled or disabled. When the “Daylight Saving Time” is enabled, the start and stop time of the Daylight Saving Time could be edited.

Seeing the video from anywhere

Pan/tilt IP Camera

Information
Network
Video
Schedule
Admin
Admin login
Led Control
Date/Time
Upgrade
reboot

Language: English

NTP Date/Time Settings

NTP Server: time.windows.com

Time Zone: ((GMT-05:00) Eastern Time(USA & Canada))

Daylight Saving Time: ☒ Enable ☐ Disable

Start time: Second Sunday in March

End time: First Sunday in November

Current Time: 2009/04/21 16:01:21

System Up Time: 0 days 0 hours 4 mins 56 secs


Save & Apply

Figure 3-20: System date/time settings page

3.15. Admin

In this page, you can modify the web login account. With this account, you can login to the IP CAM and do any modifications. The default account is “admin” without password. If the login account is forgotten, you can reset the IP CAM to the factory default settings by following the steps in section 3.19 and login with the “admin” account.

Please be noticed that this account is different from the video play password in the “Video settings” page.



Seeing the video from anywhere

The solution to keep the camera always on the screen for you. This is the most powerful and easy-to-use technology. Also in the world of wireless and mobile devices. Change and upgrade, make your implementation. Please see the last version of the camera of the 2008.1 series.

Pan/tilt IP Camera

- Information
- Network
- Video
- Schedule
- Admin
 - Admin login**
 - Led Control
 - Date/Time
 - Upgrade
 - reboot

Language: English

Web Access & Password Settings

Web access port	<input type="text" value="80"/>
Username	<input type="text" value="admin"/>
Password	<input type="password"/>
Password confirm	<input type="password"/>

Figure 3-21: Admin settings page

3.16. Upgrade

If there is some new firmware available from the supplier of this IP CAM, you can upgrade the firmware on this page. Please ask for the correct information about FTP server, username/password account and firmware filename from your supplier, and then do this upgrade. A status message about the percentage done in the upgrade procedure is displayed. Please be noticed that during the upgrade procedure, do not power off the IP CAM, otherwise, the IP CAM could probably enter into the safe mode(section 3.18). After the upgrade procedure is finished, the system will restart automatically.

You can upgrade from the ftp server or from the local file in your computer.

During this upgrade procedure, do not try to modify other settings or view the video.

Seeing the video from anywhere

Pan/tilt IP Camera

Information
Network
Video
Schedule
Admin
 Admin login
 Led Control
 Date/Time
 Upgrade
 reboot

Language: English

Firmware upgrade

☒ Upgrade from FTP server ☐ Upgrade from local file

FTP Server: 10.10.10.2

Username: fwdev

Password:

Firmware filename: IC502w-gen-020202-n.f

Firmware location:

Figure 3-22: Firmware upgrade settings page

Pan/Tilt IP Camera

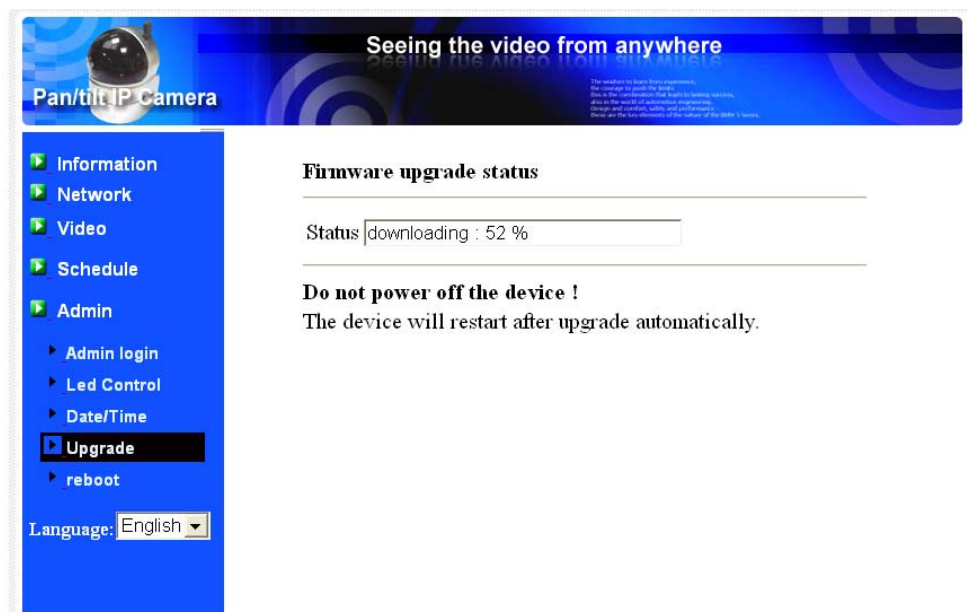


Figure 3-23: Firmware upgrade status page

3.17. Reboot

You can restart the IP CAM manually on this page. All the connected video viewing users will be disconnected.

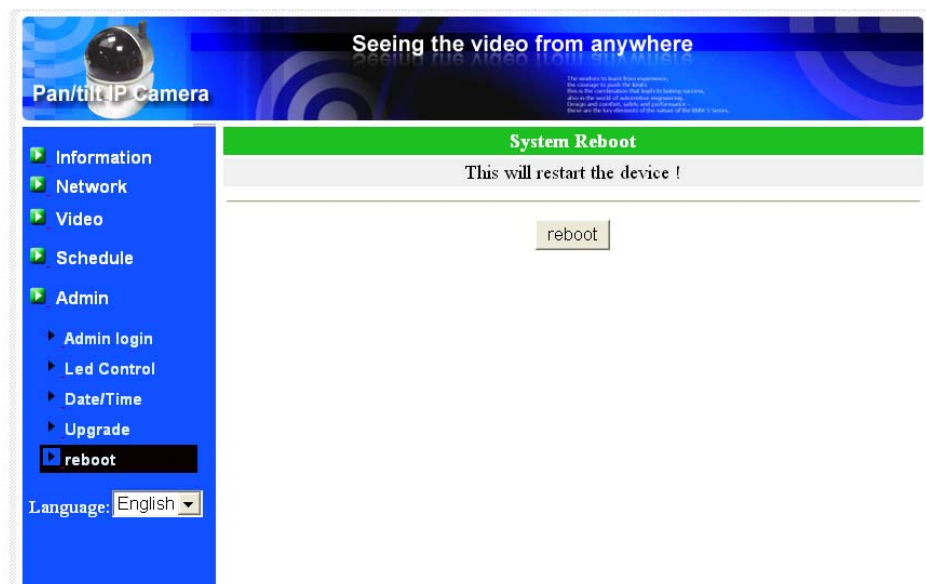


Figure 3-24: System reboot settings page

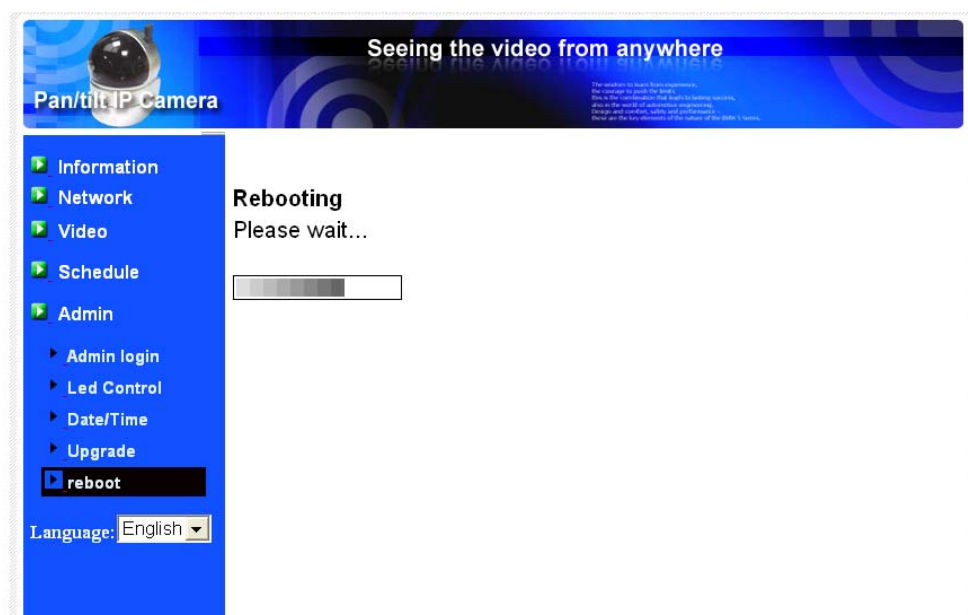


Figure 3-25: System reboot under-going page

3.18. Safe Mode

If by some abnormal operation, for example, powered off during the critical point of the upgrade procedure, the IP CAM will enter into the safe mode. In this mode, you will see the following “Safe mode” page when login into this IP CAM. Please do the upgrade operation immediately to recover the system. On this safe mode, the IP CAM can not display the video on the CamView software, but you can still find this IP CAM on the “Auto search” list.

The steps to recover from “safe mode” are the followings :

1. Use CamView to locate the IP CAM by clicking the “Auto Search” item on the CamView software.
2. Login into the web configuration page of the IP CAM.
3. Upgrade the firmware from the “Upgrade” page.

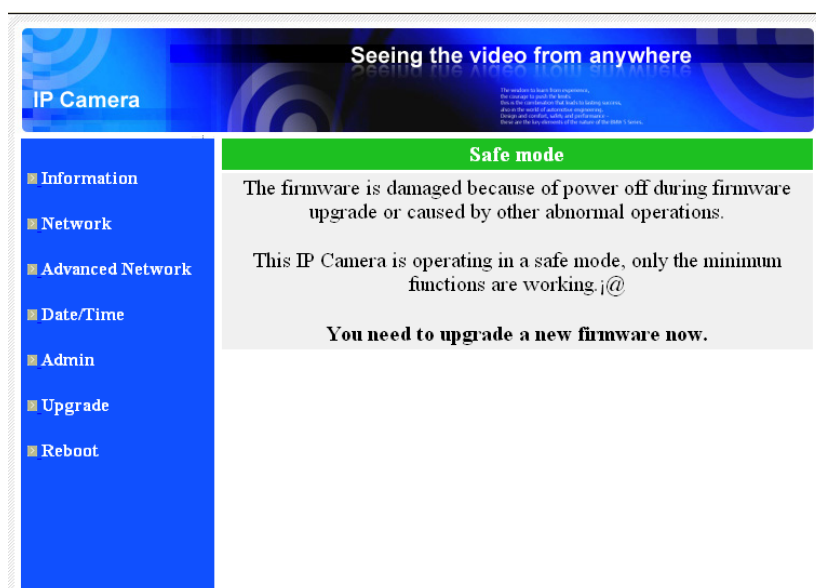


Figure 3-26: Safe mode information page

3.19. Set to factory default

For some reason, for example you forgot the web login password, you may want to set the IP CAM to the factory default settings. The only thing you need to do is using a stick to press the “reset” button on the back of the IP CAM body for more than 4 **seconds** and release it, do this when the IP CAM is powered on. The IP CAM will reset to the factory default settings and restart automatically.

The web login account will be “admin” (no password), the play-video password will be “ipcam” after reset to factory default.



Figure 3-27: Stick on the reset button to set to the factory default

4. Features and specifications

4.1. Features

- Easily access the camera from anywhere in the world via the ID/password
- No complicated NAT/router settings needed.
- Free video management software - CamView program accompanied for easy access and multi-camera management.
- 3GPP/ISMA support.
- Dual video streaming with separate frame rate/resolution/bandwidth settings for PC and mobile.
- Wide range Pan/tilt motion control.
- Built-in Web server for managing via standard web browser.
- Supports enhanced MPEG-4 compression
- Supports resolution of up to 640x480 pixels, 30 frames per second.
- View video from your Wireless or wired Ethernet network
- 802.11 b/g WiFi security supports WEP and WPA-PSK(TKIP and AES).
- Supports PPPoE protocol for direct ADSL connection.
- Motion Detection and E-mail/FTP notification, attach jpeg image file.
- Synchronize the time through NTP protocol.
- Connect up to 20 users simultaneously (please see appendix B).
- Built-in microphone for synchronized audio.
- Built-in micro-SD card interface for video storage on SD card.
- Event scheduling.
- NAS storage access.
- Online Firmware upgrade, will enter safe mode when power is off during critical firmware upgrade point.
- Watchdog function to prevent system failure.

4.2. Specifications

Models	Pan/Tilt
Power	DC 5V, 2A
Processors	RISC CPU, hardware video processing and compression.
Network interface	Ethernet 10BaseT/100BaseTX, Auto-MDIX, RJ-45
Wireless interface	IEEE 802.11g 6 - 54 Mbps IEEE 802.11b 1 - 11 Mbps Transmit power: 14.5dBm typically @ 802.11g 17.5dBm typically @ 802.11b Receiver sensitivity: 54Mbps: Typical -73dBm @ 10% PER 11Mbps: Typical -86dBm @ 10% PER Modes: Infrastructure and ad-hoc Antenna gain: 1.8 dBi
Image sensor	RGB VGA 1/4 inch CMOS Automatic exposure control, automatic white balance, automatic gain control, automatic brightness control.
Light sensitivity	0.2 Lux
Lens	3.2 mm, F2.0, viewing angle: 61°, fixed iris, focus range: 40 cm to infinity
D/I D/O interface	1 D/I for alarm detection 1 D/O for alarm triggering
Micro-SD card interface	Micro-SD card interface for local video storage The supported Micro SD-Card capacity is up to 16G bytes.
Buttons	One reset button, to factory default settings
Indicators	One LED for internet connection status indication One LED for Ethernet connection indication
Video compression	MPEG-4 Part 2 (ISO/IEC 14496-2) with motion detection, profiles: Simple Profile, level 0-3
Resolutions	160x120, 320x240, 640x480
Frame rate	Up to 30 fps in all resolutions
Video streaming	MPEG-4 Separate frame rate/resolution/bandwidth settings for PC and mobile.
Image settings	Resolution: VGA(640x480), QVGA(320x240), QQVGA(160x120) Bandwidth : 64k, 128k, 256k, 512k, 768k, 1M, 1.2M, 1.5M

Pan/Tilt IP Camera

	bps
	Frame rate : 1~5, 10, 15, 20, 25, 30 fps
Audio	Built-in microphone for audio monitoring Audio compression: MPEG2 audio, AMR-NB for 3GPP/ISMA
Security	Web management username/password protection Video display ID/password protection WiFi WEP and WPA security mode
Installation, management and maintenance	Installation tool on CD and Web-based configuration Automatic configuration backup and restore Video management software-CamView for video access and multi-camera management Firmware upgrades via FTP
Minimum Web browsing and management software requirements	Built-in web server for standard web browser access Pentium 4 CPU 1.0 GHz or higher, or equivalent AMD 1 GB RAM
Supported protocols	IPv4, HTTP, TCP, ICMP, RTSP, RTP, UDP, IGMP, RTCP, SMTP, SNTP, FTP, DHCP, UPnP, ARP, DNS, PPPoE, etc.
Accessories (included)	Power adaptor, RJ45 ethernet cable, quick installation guide, CD with installation tool/software and User's Manual, ID/Password card.
Video management software	Surveillance application for viewing and archiving up to 16 cameras
Users	Up to 20 simultaneous unicast users (please see appendix B) Unlimited users using multicast
Alarm and event management	Events triggered by video motion detection Notification/upload of JPEG images over FTP and/or email
Dimensions (HxWxD) and weight	120 x 91 x 84 mm, 350 g, camera body only.
Approvals	CE, FCC Part 15 Subpart B Class B Wireless RF - CE, FCC Part 15 Subpart C Power supply: FCC, UL EN 60950
Operating conditions	0-50 °C Humidity 20 - 80% RH (non-condensing)

Pan/Tilt IP Camera

5. Package contents



Figure 5-1: The IP camera body



Figure 5-2: Power Adaptor



Figure 5-3: Quick installation guide



Figure 5-4: Ethernet cable



Figure 5-5: Installation CD



Figure 5-6: ID/Password Card

Appendix A. List of Tested NAT/router Devices

The followings are the list of tested NAT/router devices that can work with the IP CAM and CamView software when viewing in a remote location. You do not need to do any modification on the default settings of the NAT/routers. In some office environment, if some strict firewall function is enabled, it's possible that you can not view the IP CAM video through the firewall router. In this situation, please contact your MIS person to solve the problem.

Brand name	Model name
Asus	WL-550gE
Belkin	P5D7230-4
Buffalo	WHR-G54S
Buffalo	WHR-HP-G54
Corega	CG-WLBARGO
D-Link	DI-524
LanTech	WL54G-BR
Linksys	WRT54G
Netgear	WNR834B
PCi	BLW-HPMM
SMC	SMCWBR14-G2
ZyXEL	P-334WH

Table A-1: List of tested Wireless AP/router devices

Brand name	Model name
AboCom	CAS5047
ASUS	RX3041
Buffalo	BBR-4HG
Corega	CG-BARSD
DLink	DI-604
Edimax	BR-6104K
LanTech	HR-114Pro
Lemel	LM-IS6500
PCi	BRL-04R
ZyXEL	Prestige-334

Table A-2: List of tested Wired NAT/router devices

Appendix B. Maximum Allowed Video Users

The maximum allowed video users for a single Pan/Tilt camera at the same time is dependent on the video settings including “Internet speed” and resolution. The followings are the summary of the maximum allowed video users:

1. When audio is disabled.

For video resolution of 160x120 pixels

Frame rate\bandwidth	64k ~ 512k	1M ~ 1.5M
5fps ~ 30 fps	20	4

For video resolution of 320x240 pixels

Frame rate\bandwidth	64k ~ 256k	512k	768k	1M ~ 1.5M
5fps ~ 30 fps	20	18	9	4

For video resolution of 640x480 pixels

Frame rate\bandwidth	512k	768k	1M ~ 1.5M
5fps ~ 30 fps	8	6	4

2. When audio is enabled.

For video resolution of 160x120 pixels

Frame rate\bandwidth	64k ~ 256k	512k	1M ~ 1.5M
5fps ~ 30 fps	20	14	4

For video resolution of 320x240 pixels

Frame rate\bandwidth	64k ~ 256k	512k	768k	1M ~ 1.5M
5fps ~ 30 fps	20	12	8	4

For video resolution of 640x480 pixels

Frame rate\bandwidth	512k	768k ~ 1.2M	1.5M
5fps ~ 30 fps	6	4	3

Appendix C. Performance Information

1. Video Performance Information

The video quality is dependent on the video parameter settings and the network quality. If you want to have a better video quality, you will usually set higher resolution and higher frame rate. This is fine when you are viewing the video locally in the same network. But when you want to see the video remotely through the Internet, you need to know the Internet speed (bandwidth) connected to your home network. If the “Internet speed” setting of your IP camera is very large, but your real Internet speed (bandwidth) is relatively low, the video quality could be very bad. In some worst case, the video display could be disconnected. In order to have the best video quality, you better have broadband service from your ISP and set the “Internet speed” of the IP camera a little lower than the real Internet speed provided by your ISP.

Also need to notice that when multiple users are displaying the videos from the same IP camera at the same time, the video bandwidth times number of users will be needed for the Internet speed.

2. WiFi Performance Information

The WiFi performance is dependent on the distance between the IP camera and the AP (Access Point) / router and dependent on the number of devices connected to the AP/router. Also need to consider that if there are any barriers like wall or floor between the IP camera and the AP/router. IF there are some open space between the IP camera and the AP/router, you also need to know that the performance will be interfered in rainy day. The antenna gain and it's direction in the AP/router will also affect the WiFi performance. In general case, when the IP camera is set to the default video setting (256k bps) and there are no other interferences between the IP camera and the AP/router, the working straight distance is about 100 meters between IP camera and the AP/router.

Appendix D. Trouble shooting

1. What's going on when the red led light on the IP camera is flashing?

A: When the IP Cam is connected to the Internet and working correctly, the red led light will be on constantly. If the red led light is flashing, it's probably because there is some network connecting problem. Please check the network connection again and follow the instructions on the user manual to set it up again.

2. When the IP Cam is connected to the network through wireless connection, the video quality is not good, how could I fix this problem?

A: When the IP Cam is connected using wireless network and the video quality is not good, it's probably because the distance of the IP Cam is too far away from the wireless AP(Access Point) or WiFi router, or there are too many devices connected to the AP, or maybe because the WiFi antenna is not in the best position. Please try to figure out which one is the cause of the problem and you can then fix this problem.

3. Could I adjust the effective focus of the IP Cam?

A: The effective focus of the IP Cam is from 30cm to infinity, so, in almost all circumstances you can see the video clearly. There is no need to adjust the effective focus.

4. What's the viewing angle of the IP Cam?

A: The viewing angle of the IP Cam is about 60 degrees.

5. What's the longest distance using the IP Cam to see the video?

A: When using the IP Cam to see a long-distance object, whether it's clear or not depends on the size of the object. Usually when your eyes can see something clearly in that distance, the IP Cam can also see that object clearly in about the same distance.

6. What should I do if the password is forgotten, and the ID/password card is missing?

A: The easiest way to solve this problem is to reset the IP Cam to the factory default. Please stick on the reset button on the rear panel of the IP Cam for more than 3 seconds and release it. The IP Cam will then restart to the factory default. The default administrator account is "admin", administrator password is empty. The default video-play password is "ipcam". You can adjust these account and passwords by using the browser to login into the IP Cam and do the needed modifications.

7. What should I do if I can not hear the audio sound from the IP Cam?

A: There is a microphone inside the IP Cam. If you can see the video from the accompanied CamView software, but can not hear the audio sound, please check the followings:

- (1). Check if the speaker of the computer is turned on, you can try to play an audio file on the computer to verify this.
- (2). Check if the microphone on the IP Cam is enabled. Please login into the web configuration page of the IP Cam or open the "video settings" from CamView, select the "video" settings, click the "Enable audio microphone" choice.

8. I can see the video in a remote place, but the video quality is not good and sometimes the video will disconnect and then the video will reconnect again by itself.

Pan/Tilt IP Camera

A: It's probably because the internet bandwidth (internet speed) is not big enough. Please try to apply for a better internet connection from your Internet Service Provider or decrease the bandwidth settings of the IP Cam. You can adjust the bandwidth requirement of the IP Cam either from the CamView software or login into the web configuration page of the IP Cam to do the modification.

9. Does the IP Cam provide the recording function?

A: You can do the recording of the video/audio of the IP Cam from the CamView software with the CamView software version later than the version number v1.1. Another software CamPlay is needed to play the recorded vide/audio files.

10. The video seems a little dark when the IP Cam is used inside the house, how could I improve this?

A: You can increase the "Low light sensitivity" in the "video settings" page either through web configuration or through CamView settings to "High" or "Very high". This will tremendously improve the video quality in dark environment. Another model of our IP Cam products IC212w with IR led inside could help on some of the very tough environment even in wholly darkness. But please be noticed that when the IR led is turned on in the dark room, the video will be black and white only.

11. Can I connect the IP camera directly to my PC/notebook with an Ethernet cable?

A: If the IP camera is directly connected to your PC/notebook computer using an Ethernet cable, the IP camera will automatically use an IP address called "auto IP" with IP address 169.254.xxx.xxx. If your PC/notebook computer is configured to DHCP, it will also use an "auto IP" address. But this will take about one minute after the IP camera is connected to the computer and you need to make sure that the WiFi interface on your PC/notebook computer is disabled. After about one minute, you can run the CamView software to access the IP camera, the CAM ID should be displayed on the "auto-search" list. You can then see the video by double clicking the CAM ID icon. But you need to know that in this situation, other local or remote computer can not see the video.

Pan/Tilt IP Camera

Appendix E. 3GPP/ISMA operation

3GPP/ISMA is using RTSP protocol for 3G mobile phone to display the video stream from some network devices, including IP camera. The IP camera supports the RTSP protocol and video/audio codec needed by 3GPP/ISMA. Users only need to access the address rtsp://ip_cam_address/CAM_ID.password on the 3G mobile phone to access the video of the IP camera. No other extra configuration is needed on the IP camera. Where ip_cam_address is the public IP address of the IP camera. CAM_ID is the unique Camera ID of the specific IP camera. Password is the video play password of the specific IP camera(detailed in section 3.6). Different 3G mobile phone may need different operation to be able to key in the rtsp address, please contact the 3G mobile phone customer service for more details.

The video quality and resolution is the same value as set on the “video settings” page. Since the bandwidth provided by the 3G service is under 256k bps, better to configure the “Internet speed” of the IP camera to 128k or 64k bps.

Notice 1: when the audio microphone is enabled on the IP camera, if the “Internet speed” in “video settings” page is bigger than 256k or the resolution is 640x480, the audio will be disabled for 3GPP/ISMA access. In all other cases, the 3G mobile phone will be able to hear the audio from the IP camera.

Notice 2 : when the audio microphone is enabled on the IP camera, if there is any 3G mobile access to the IP camera(the mobile will hear the audio), in this same time, there will be no audio on the CamView playing window for this IP camera.

For more information about operation on different 3G mobile phones, please contact us for detailed document.

Appendix F. Third party and embedded web page

integration

For third party and embedded web page integration, the IP camera supports the standard RTSP protocol and video/audio codecs needed by most generally used video play software, including Apple QuickTime and VideoLAN. The supported media protocols including TCP and UDP. The IP camera will automatically use TCP or UDP media stream depends on the connection request. The video codec supported is MPEG4, the audio codecs supported are AMR-NB and MPEG2-audio.

The access methods are the followings :

rtsp://ip_cam_address/CAM_ID.password.mp2 for MPEG4 video + MPEG2 audio
rtsp://ip_cam_address/CAM_ID.password for MPEG4 video + AMR-NB audio

Where ip_cam_address is the IP address of the IP camera. CAM_ID is the unique Camera ID of the specific IP camera. Password is the video play password of the specific IP camera(detailed in section 3.6). Users can modify the password of the IP camera to prevent others to see the video.

For embedded web page integration, add the following codes into the proper position of the desired web page :

```
<object classid="clsid:5C519EC4-2BAE-44CE-B7F5-AD0CCD4BEFBD"
id="mpeg4ax"
codebase="http://www.starvedia.com/ActiveX/axmpeg4.cab#Version=0,0,0,0"
width="320" height="240">
<param name="Src" value=" rtsp://ip_cam_address/CAM_ID.password.mp2">
</object>
```